AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT122

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

SUZUKI VITARA	P/N **BG250**

1. Clean bonnet and open.

2. Place Bonnet Guard in position on the bonnet so that the lower moulded tag sits up against the underside stiffener panel of the bonnet. **Ensure it is centrally located on the bonnet.**

3. When the Bonnet Guard is in position, mark the four holes onto the stiffer panel on the underside of the bonnet and then remove the Bonnet Guard.

4. Drill the marked holes with 2.8mm (7/64") drill.
Take care to only drill through the inside panel !

5. Re-position the Bonnet Guard on the bonnet of the vehicle. Attach the screws and washers provided. DO NOT OVER TIGHTEN THE SCREWS.

6. Fit "Bumpons" to vehicle bonnet:
These protective adhesive domes MUST be fitted to prevent possible damage to the bonnet by rubbing.

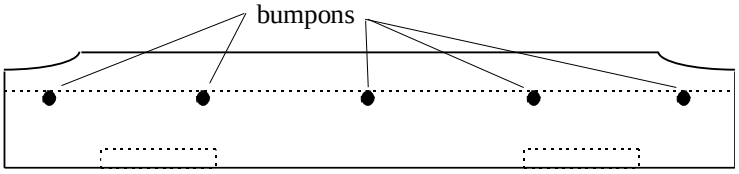

THE BONNET GUARD MUST NOT TOUCH THE BONNET WHEN IN USE.
Check the drawing supplied here (above) as a guide to the preferred positions to locate the Bumpons.

7. To apply the bumpons, the bonnet must be dry and clean of dirt, grease, polish, or water. When the Bumpon positions have been decided, clean these areas with the Alcohol Prep Pads supplied, and apply the Bumpons to the hood. Do not touch the adhesive.

8. It is the drivers responsibility to regularly check that the Bumpons are in place and that the Bonnet Guard never touches the bonnet. Replacement parts are readily available from the Distributor.
The Bonnet Guard should not come into contact with the bonnet paintwork at any time.

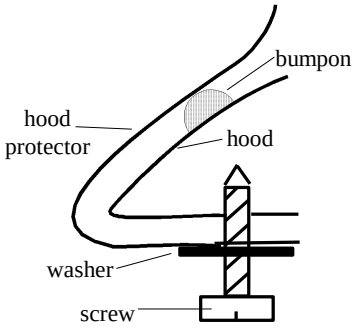

Bonnet adjustment: After fitment of Bonnet Guard, it is important to check if there is sufficient room between the bonnet and the grille. Close bonnet slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the bonnet stops to allow more room.

It is important to **never slam shut** the bonnet

Wash acrylic with mild soap and luke warm water, using a clean soft cloth or sponge.
CAUTION: FOR VEHICLES WITH BONNET TURBO INTAKES, PLEASE CHECK SUITABILITY OF THIS PRODUCT WITH YOUR SERVICE TECHNICIAN.