AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

# FITTING INSTRUCTIONS FIT212

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

| **SUBARU FORESTER** | P/N **BG500** |
|---|---|


**1.** Clean and open bonnet.


**2.** Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.

**3.** Remove 2 plastic fasteners.

**4.** Fit Bonnet Guard in position, and fasten securely with supplied plastic “push pins”. Note sequence as per diagram as below.

Some vehicles will have a “rubber weatherstrip” attached to the underside of bonnet. If so, insert the Bonnet Guard between the bonnet and the weatherstrip.

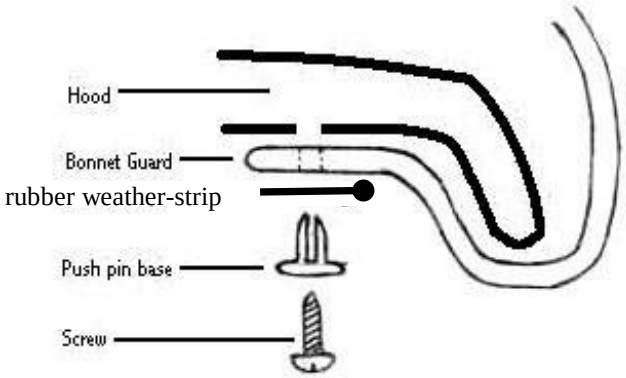

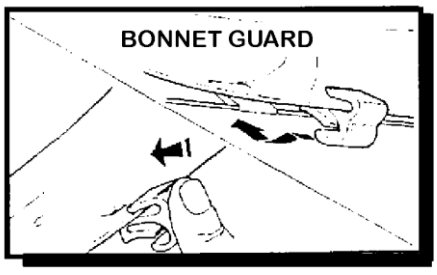
**5.** Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.

**6.** Snap 4 supplied plastic “W” clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.*
*ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.*
*NEVER PRESS ON THE BONNET GUARD.*